

3C\Temp User Manual




3C\Temp User Manual

Initializing the Logger:

Begin by starting the MaxiThermal2 software, connect the USB cable, or plug the device into the computer USB port.

On the menu bar select **Logger -> Logger Initialization** in the drop-down menu. The Logger Initialization window will open.

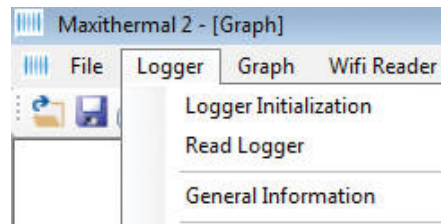

- 1) If more than one logger is connected, use the drop down menu to choose which logger to program.
If the logger was connected after opening the **Logger Initialization** window, use the **Scan** button to find it.
- 2) For **Description**, enter a descriptive name for the recording.
- 3) For **Logger Clock**, select the Time Zone for the logger clock.
- 4) For Unit, select temperature scale, °F = Fahrenheit or °C = Celsius.
- 5) Select a **Start Delay** time if you want a delay after pressing the start button, before starting to record.

The screenshot shows the 'Logger Initialization' window with the following settings and callouts:



- 1**: Scan button
- 2**: Description field (3c\temp USB Data Logger)
- 3**: Logger Clock dropdown (UTC-08:00) Pacific Time (US & Canada)
- 4**: Unit radio buttons (Celsius selected)
- 5**: Start delay dropdown (0)
- 6**: Duration dropdown (4)
- 7**: Interval dropdown (45)
- 8a**: Alarm Minimum (10)
- 8b**: Alarm Maximum (20)
- 8c**: Alarm Quarantine (0)
- 8d**: No alarm checkbox
- 9**: External Alarm section (Minimum 10, Maximum 18)
- 10**: Humidity section (Minimum 20, Maximum 60)
- 11**: Stop Key radio buttons (No selected)
- 12**: Program Unit button
- 13**: Log button

3C\Temp User Manual

- 6) Select the **Duration** of recording time. The **Sampling Interval** will be automatically calculated.
- 7) Or, select the **Interval**, desired. The **Duration** will be automatically calculated.
- 8) **Alarm:**
 - a. If you want a High Alarm, enter the temperature for the **Maximum**.
 - b. If you want a Low Alarm, enter the temperature for the **Minimum**.
 - c. **Quarantine** allows setting how many measurements taken outside the alarm limits is acceptable. For example, if the measurement interval is 1 minute, and the environment cannot exceed those limits for more than 5 minutes, then you would enter a 5 into the quarantine field. If more than 5 measurements are taken, then "Quarantine" will be showed on the display and reports. Not all logger models support this function.
 - d. If you don't want an Alarm, click the **No Alarm** button.
- 9) For loggers with external probes, enter the **Maximum** and **Minimum** Alarm values for the external sensor.
- 10) For loggers with Humidity sensors, enter the Maximum and **Minimum** Alarm values.
- 11) Under **Stop Key**, click **Yes** to allow the logger to be stopped manually (by holding down the start button for 4 seconds while the logger is recording). To disable this feature, click the **NO** button.
- 12) Click **Program Unit** to write the new configuration to the logger.

The progress bars will appear and **Event Log (13)** will update with Write Successful and End Settings successful.

The device is ready to run. To **Start Recording**, press and hold the START button on the unit until the green light flashes, or the display indicates that the unit is recording.

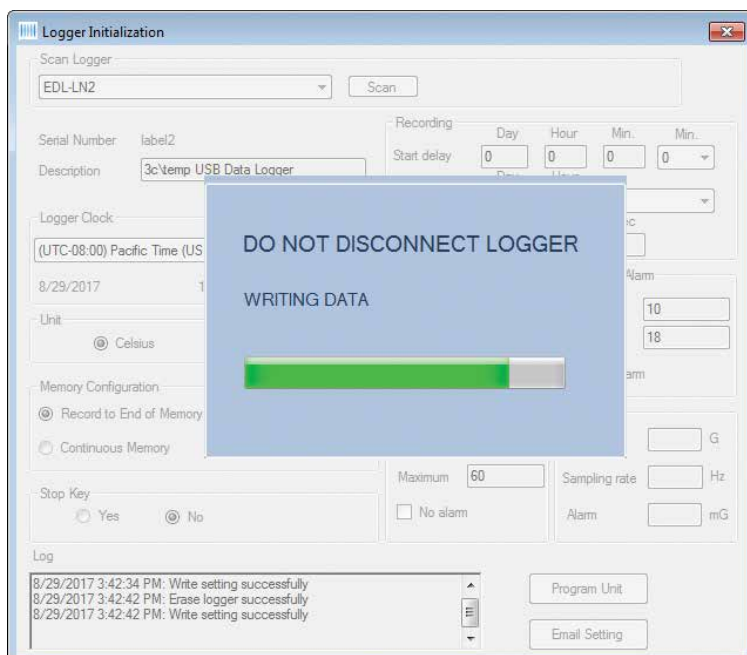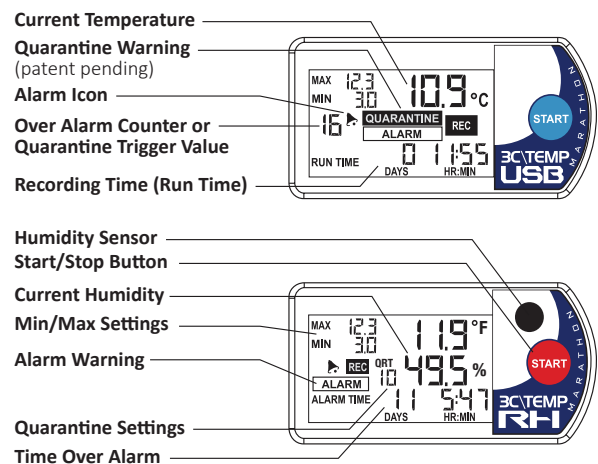


3C\Temp User Manual


Reading the Logger:

Begin by starting the MaxiThermal2 software, connect the USB cable, reader station, or plug the device into the computer USB port.

On the menu bar select **Logger -> Read** Logger in the drop-down menu.

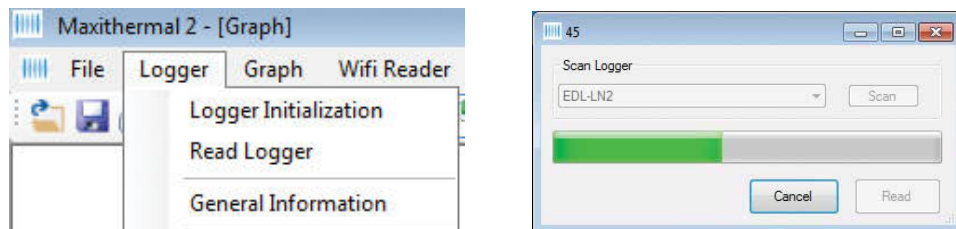


When the progress bar fills up, the Windows file explorer opens to choose a location to save the file. A dialog box will pop up once the location has been chosen letting you know the file has been saved successfully.

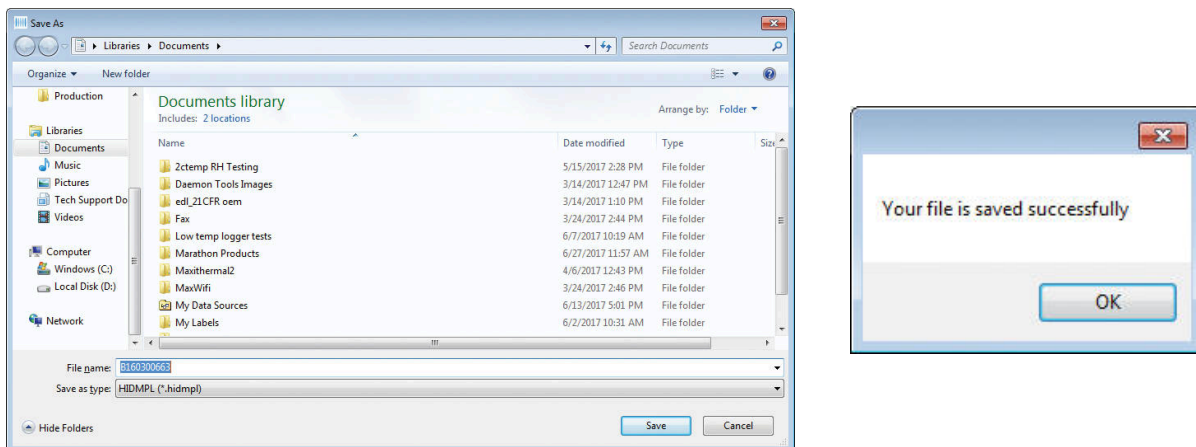

Next, all windows will close automatically and the graph is displayed.

When you close the plot a warning window will open which asks if you want to save the data. Click **Yes** or **No**. the file has already been saved. Unless the file has been modified (e.g. titles changed), click No.

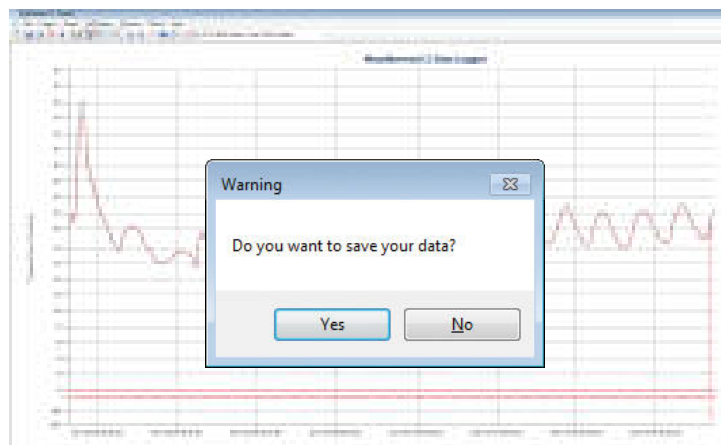


3C\Temp User Manual

Creating Reports:

On the menu bar select **Logger -> General Information** in the drop-down menu.

The General Information window will open. Click **Read**. The software will read the logger's information and fill in the fields.

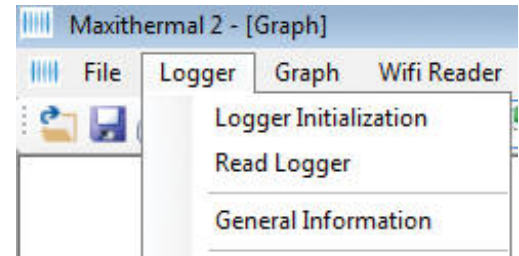

General Information

Scan Logger: EDL-LN2 [Scan]

Serial Number	Firmware Version	Logger Mode
Description	Setting Time	Delay Time
Duration	Run Mode	Stop Key
Temperature and Humidity Interval	Ambient Low Alarm	Probe Low Alarm
Unit	Ambient High Alarm	Probe High Alarm

Vibration: Interval, Sampling rate, Fullscale, Alarm limit

[Print] [Read]

General Information

Scan Logger: EDL-LN2 [Scan]

Serial Number: B160300663	Firmware Version: v4.1	Logger Mode: Multiple Use
Description: [bc\Temp USB Data Log	Setting Time: 8/29/2017 3:42:50 PM	Delay Time: 0 day(s) 0h:0m
Duration: 4 day(s) 0 hour(s)	Run Mode: Record to End	Stop Key: No
Temperature and Humidity Interval: 6s	Ambient Low Alarm: 10	Probe Low Alarm: 10
Unit: Celsius	Ambient High Alarm: 20	Probe High Alarm: 18

Vibration: Interval, Sampling rate, Fullscale, Alarm limit

[Print] [Read]

On the Menu bar select **Graph -> Summary** in the drop-down menu, or click the Summary icon. The Summary Information window will open where you can scroll through the logger information.

Summary

Setting Information

Unit: Celsius

Duration: 180 day(s) 0 hour(s)

Delay start: 0 day(s) 0h:0m

Configured Mode: Multiple Use

Logger Information

Serial number: B170100002

Memory size: 8k data Thermistor, 8k data RTD

Description: Marathon

Firmware version: v4.6

Run Mode: Record to End

Over Memory: No

Time information:

Setting time: 3/20/2017 3:40:31 PM

Start time: 3/21/2017 7:32:08 AM

Stop time: 4/6/2017 12:41:18 PM

Elapse time: 16 day(s) 5h:9m:8s

Measurement

Sample interval: 0h:33m:6s

[Close]