

ShockWatch® Label QR - Recipient Guidance

ShockWatch® Label QR is a single-use impact sensor designed to ship with sensitive assets to monitor for note worthy impact events that may compromise product integrity. The sensors goes red when it has experienced an impact over the selected threshold, prompting receivers to halt receipt and contact the shipper. Shippers using ShockWatch Label QR care about the quality of delivered products and as such put in the appropriate measures to maintain consumer confidence.



Scan the ShockWatch Label QR on your shipment immediately upon receipt.



1. Scan the QR code on the ShockWatch Label QR

Image Captured

4. Once box is yellow, hold for 1 second to auto capture the image.



2. Click "Continue" button on bottom of screen to open your camera.

Save Scan

5. Click "Save Scan" to check sensor condition.



3. Place the ShockWatch Label QR inside the black outline and adjust until the box turns yellow.




6. The condition of the ShockWatch Label QR will be analyzed and temperature status will display on the final screen.

Initial QR Scan





Serial Number & Scan Instructions

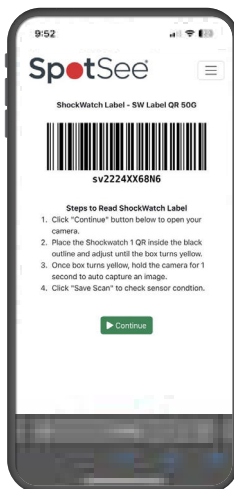

Vision System Check



Condition Information

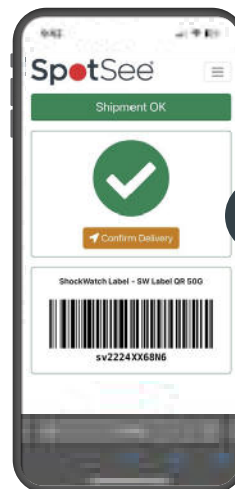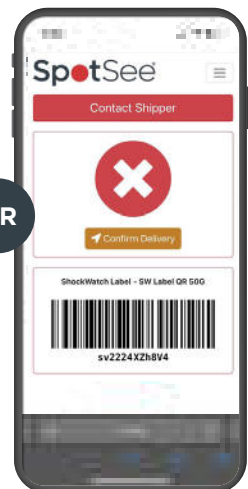

OR